

30X OPTICAL ZOOM STARLIGHT PTZ cruise setting



Use the PTZ command parameters
for the corresponding product

PTZ CRUISE COMMAND

- 1 Select 1-8 positions to set in turn, and then select 65 to invoke the command to start the point cruise.


CamHipro setup page



CamHipro-APP



Please enter the corresponding command number to select Settings

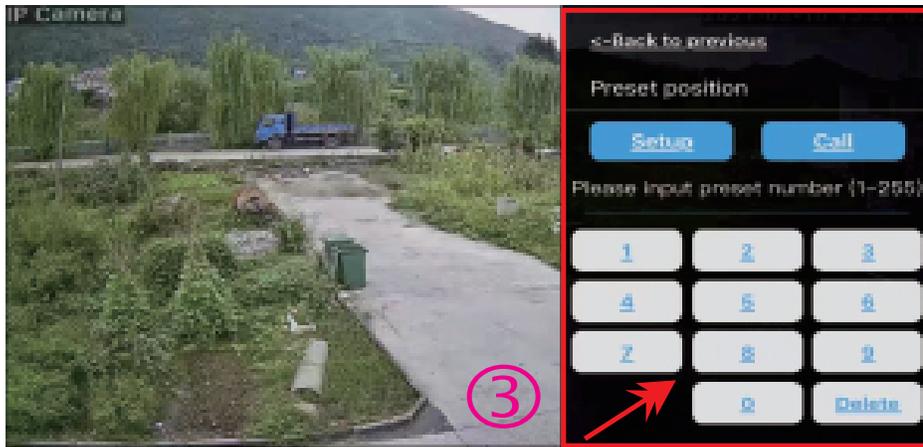

The operation method of all PTZ setting commands is the same. Different commands have different effects

- ② Turn on human tracking
Enter command 152 to enable body tracking. The setting method is as shown in Figure -1

- ③ Enter command 87 to start the left and right low-speed cruise. The setting method is the same as figure -2

- 4 Enter command no . 88 to invoke , open the left and right medium speed cruise , the setting method is the same as figure - 1
- 5 Enter command 89 to start the left and right fast cruise. The setting method is the same as figure -1
- 6 Enter command 77 to reset to zero. The setting method is the same as that shown in Figure -1
- 7 Enter command 90 to delete all preset points. The setting method is the same as figure -1
- 8 Enter command 94 to restore factory Settings. The setting method is the same as figure -1
- 9 Enter command 96 to invoke, and PTZ stops working. The setting method is the same as figure -1

CamHi - Setup page, operation method is the same as figure -1



Computer HiP2P remote management client



Computer remote management client

Client Settings page



Cruise parameter commands are shared between mobile AP Pand computer client